

# Soft-Side Pedestal Installation Guide.



1. Install Surround of base by sliding corner Extrusions into grooves. Allow 170mm from wall or headboard for decking overlap. Check the frame is square by measuring diagonally.




2. Place the cross sections into the base with the long centre board first, and then slide the remaining boards into place.



3. The Deck is then placed on top of the base ensuring that all four sided overlap evenly. It is important to reposition the base if this is not even.



4. Install Heater on top of the foam bath by folding the safety liner back and positioning the heater board and heater on top of the foam bath running the cord through the hole in foam base. Never place the heater under the foam!

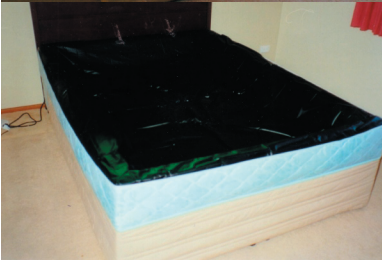

5. Once the heater is in place with the writing upwards place your safety liner like a fitted sheet over the heater and foam bath. Do Not turn the heater on until the bed is full.



6. Place the mattress in base, undo the cap and pull out any wrinkles and check the corners are square in frame. Check the deck is still square once more before filling the bed.



7. Fill bed to just under the top of the foam bath remove excess air with a broom stick. Add a quality Waterbed Conditioner. Zip the cover on and allow your bed 48 to warm and the baffles to expand.

