





1. Install Pedestal surround by sliding corner extrusions supplied into timber groove in all four corners. Top board should 220mm from wall. Measure diagonally to square the frame.

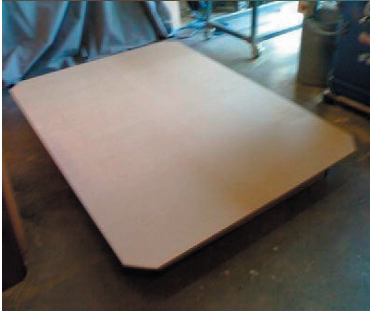



2. Place the X section into frame by slotting them together. Single beds have two separate x sections. Then lower the decking on to the pedestal frame ensuring the overlap on all four sides is even. Measure under deck to the pedestal to check.




3. After deck, place the headboard in position and screw the two side rails into place. These will have a routed groove on the bottom edge where they sit onto the decking.

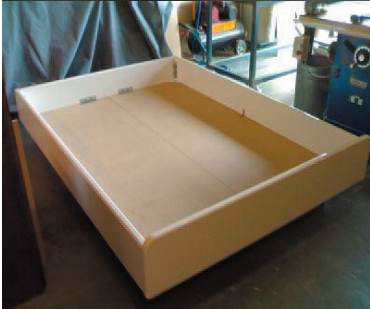

4. After the sides are secure then place the foot board in position and screw into place. 4 L brackets (2 in a single) are then added in the middle of each side to secure the frame to the deck. Shorter screws are used into the deck.

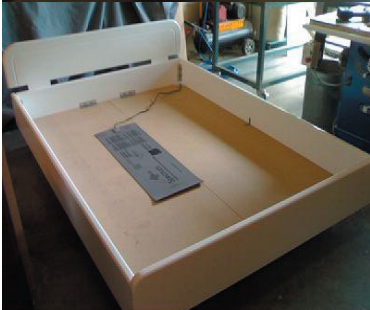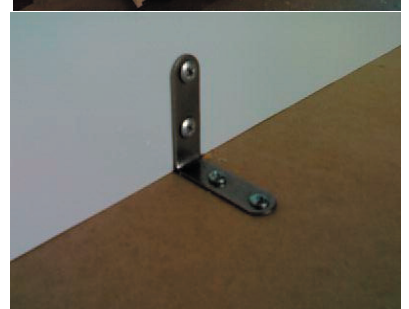

5. The heater can now be placed in the middle of the bed. Run the cord down through one of the corners. Heaters should not be placed over joins in deck. Place the liner over the heater smoothing out the wrinkles ensure the liner is square.

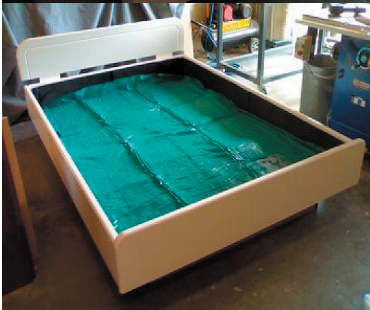

6. Place the mattress or bladder in the frame check the corner seams of the mattress are square in the frame. Pull the valve up and fill the bed with an inch of water then pull the wrinkles out from under the mattress checking the square. Then continue to fill the bed to the level of the frame, do not overfill. Chase the air out of the bed and add a waterbed treatment. Replace the cap and push valve back into the bed. Baffles take 48 hours to expand in a new mattress. Phone 1800 124 444 with any questions.